



Typical wall construction layouts - Sheets fixed vertically

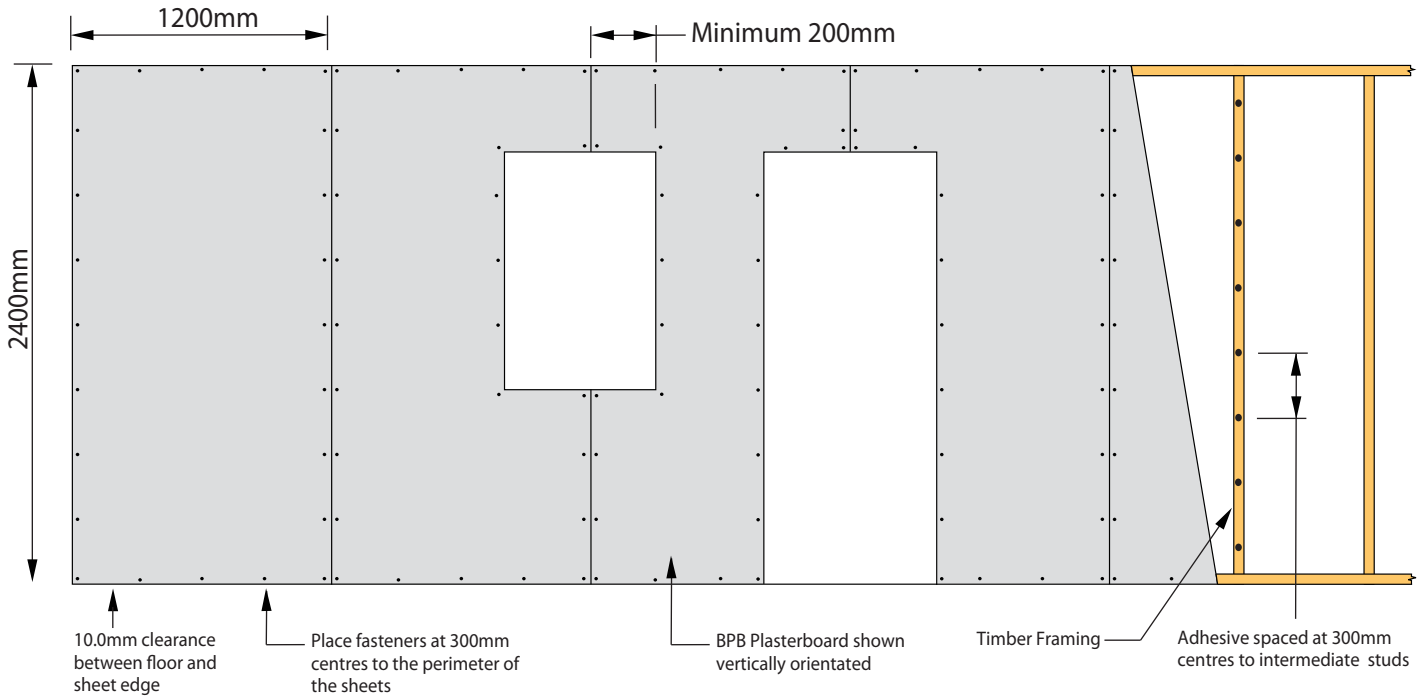

Typical wall construction layouts - Sheets fixed horizontally

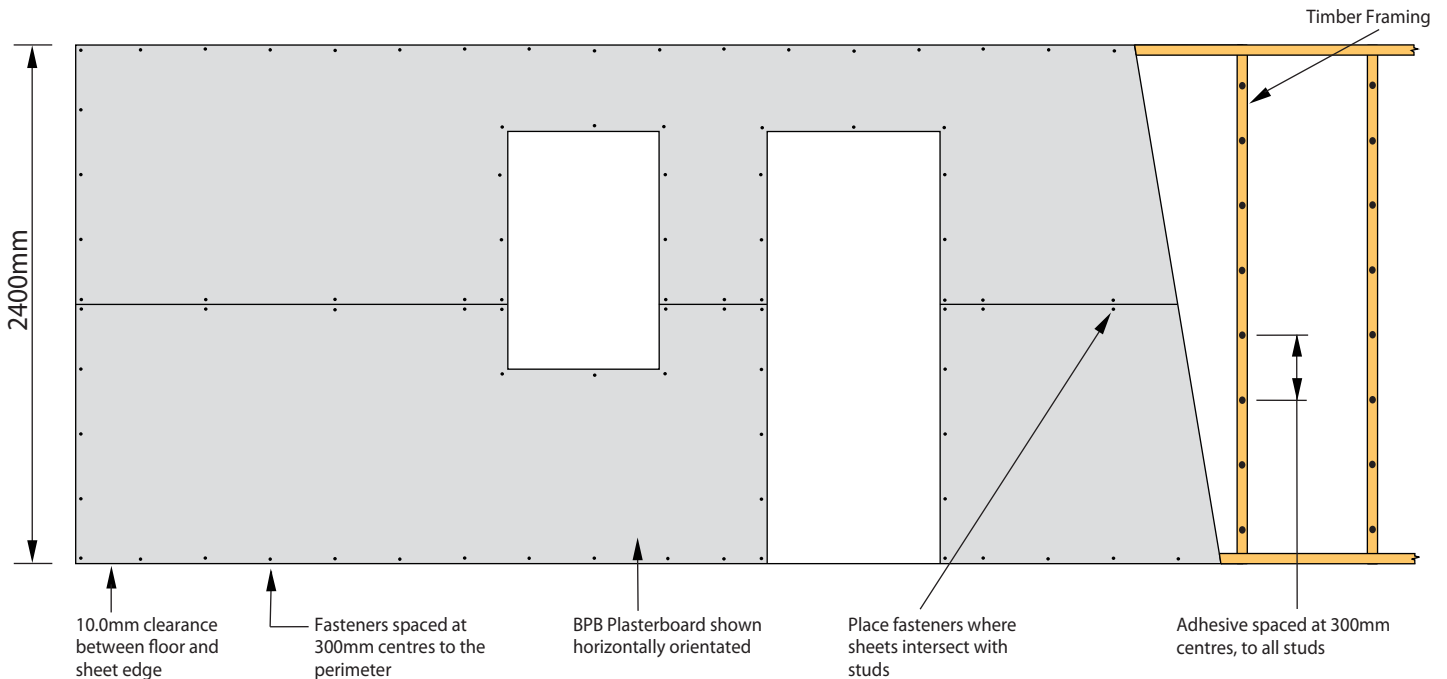

■ Use of Adhesive

BPB recommends the use of adhesive. When installing BPB Plasterboard ensure that fasteners do not pass through the adhesive and place adhesive at alternate intervals to the fasteners (300mm centres)

Dab of adhesive approximately 25mm diameter

